

Figure 1

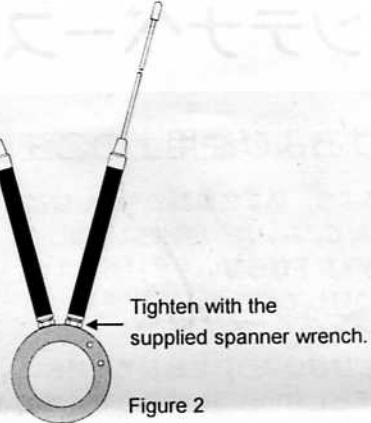


Figure 2

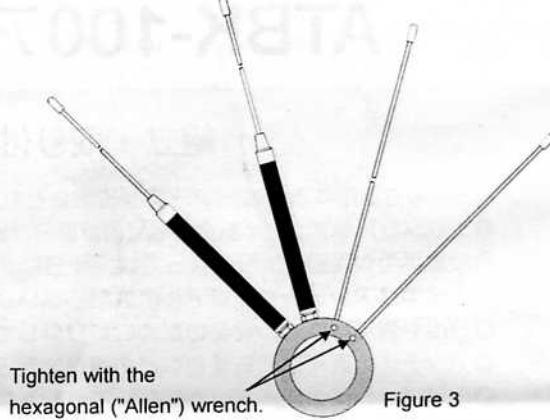


Figure 3



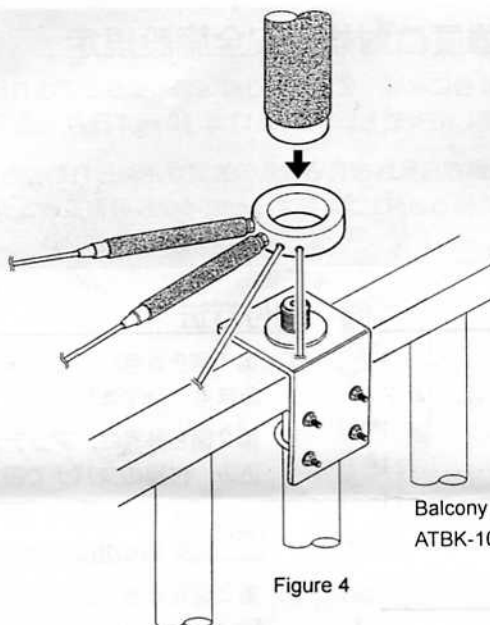


Figure 4

Balcony Rail Mount Not Supplied with ATBK-100 Kit.

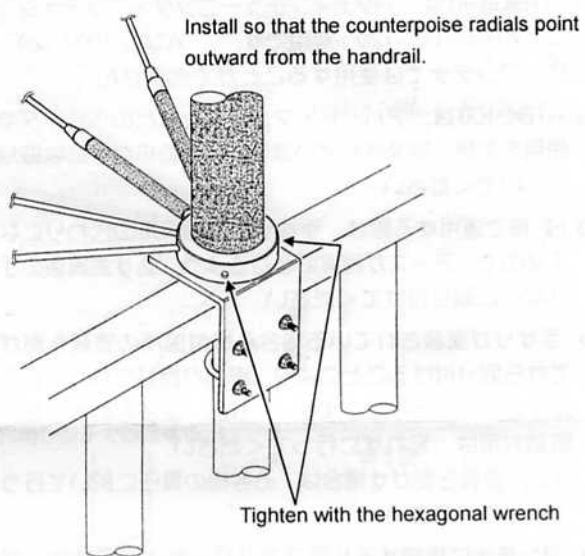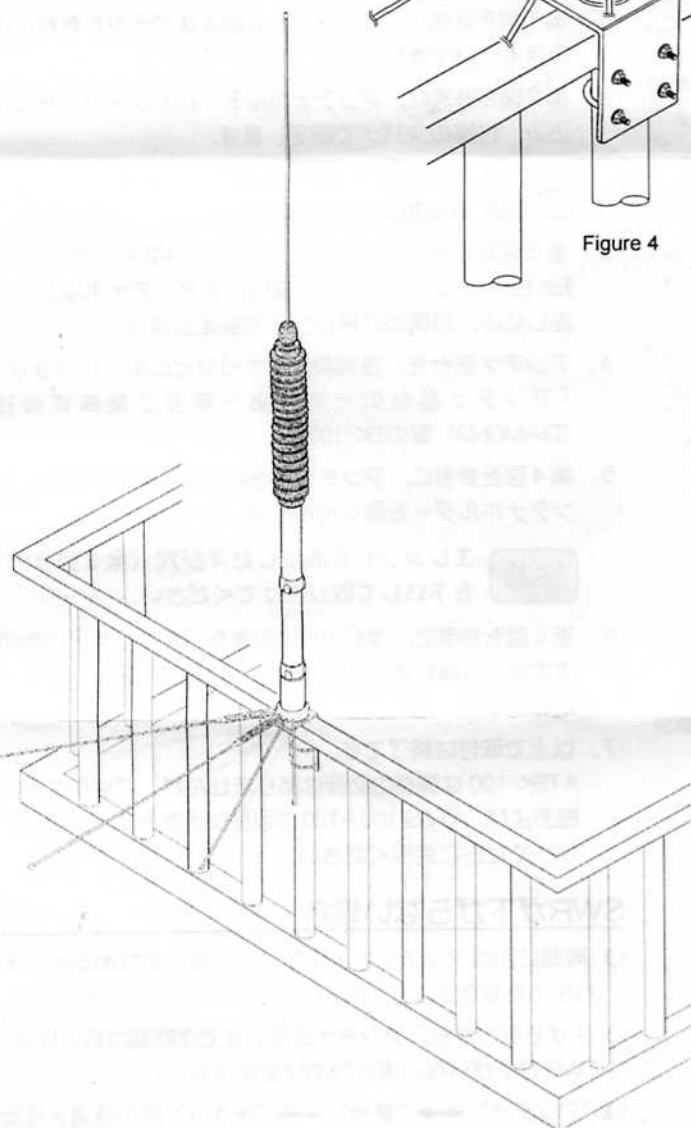

Tighten with the hexagonal wrench

Figure 5

Install so that the counterpoise radials point outward from the handrail.